



(9)



(10)




(11)



(12)


and extend it to level the bed. (12) Attach the canvas shock cord around the button under the bed. NOTE: Steps 10, 11 & 12 are most efficiently done in sequence at each corner of the trailer. (13) On the interior, fasten canvas snaps at road cover corners behind telescope and engage both bed roofs to road cover. (14) Engage remaining latches between the road cover and sidewalls and crank road cover down to rest gently on the sidewalls (providing sufficient weather seal). (15) Remove door from storage area. (16) Hold door/frame unit with the top hanger brackets facing outward. Place bottom of frame over threshold. Raise vertically to engage top hanger brackets into edge of road cover extrusion. Secure the final door/frame position with a little downward pressure. Engage swing catch at each side of door. NOTE: Out-of-square door opening could be caused by improper leveling of trailer or plastic sidewall shifted forward or backward. (Raise roof off sidewall, if necessary to slide wall forward or back to align with door opening). Make certain set up trailer has good distribution of weight on all points of ground support, including tires.

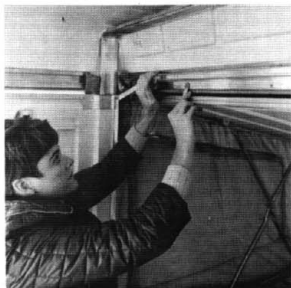

(13)



(14)

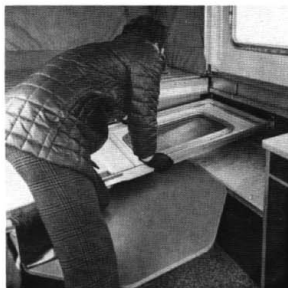

(15)



(16)